



1.5" (38mm) Headrail **Installation Instructions**

Mount the brackets to the wall or window frame, with the outside brackets no further than 2 inches (50mm) from the ends of the headrail. On wide shades, space the additional bracket(s) at equal intervals.




For wall or outside mounts, use the rear bracket holes.

Make sure the release tab is always mounted on the bottom.

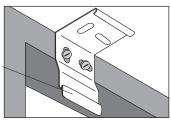


For inside or ceiling mounts, use the top bracket holes.


Make sure the release tab is always mounted on the bottom.

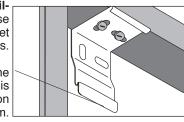


2. Mount the headrail. Position the headrail with the front panel (A) resting on the top lip of all brackets. Push the bottom front of the headrail firmly backwards and toward the window until the lip on the rear of the headrail engages the bracket and snaps into place, (B) as shown.

> Push here backwards and toward the window.

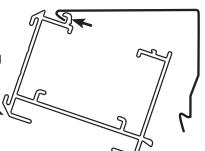

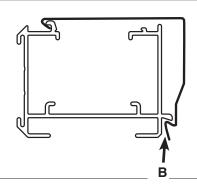

3. Install SafetyHold 3 Tension Device See SafetyHold 3 Installation Instructions



- 4. Operate the shade by pulling down on one side of the cord — one side of the cord raises the shade, the other side lowers the shade. Do not lift the bottom rail with your hands. Also, be careful not to place objects on the window sill that will interfere with operating the shade or cause it to hang unevenly.
- 5. To remove a shade, from the bottom rear of the headrail insert a flathead screwdriver in between the headrail and bracket. Gently twist the screwdriver and pry open the bracket to release the headrail. As you release the brackets, support the headrail to keep it from falling.

RollEase Headquarters

200 Harvard Avenue Stamford, CT 06902-6320 USA Office: 203.964.1573 / 800.552.5100

Fax: 203.964.0513 Order Fax: 203.358.5865 www.rollease.com

RollEase Distribution Center 320 Expo Boulevard Lenoir, NC 28645 USA

RollEase West

7310 West Roosevelt Street, Suite 26 Phoenix, AZ 85043 USA Office: 623,936,5818 Order Fax: 623,936,5294